




**Cordless, Rechargeable
VACUUM CLEANER**

Household Type

**Owner's Guide
Model Z77B**

Charge 14-16 hours
before first use.

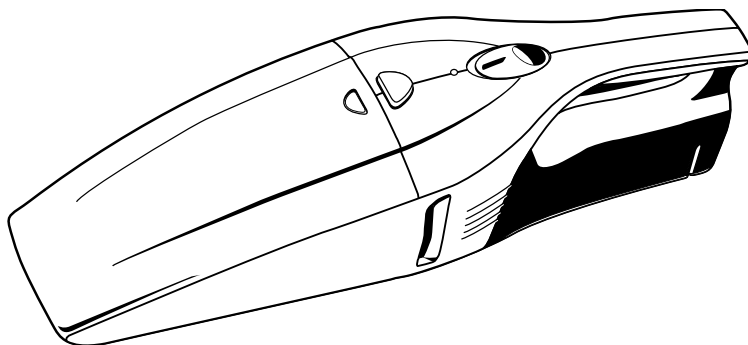

Index

Important Safeguards	2
Service Information	3
Assembly	4-5
Use	5
Dust Cup	6
Motor Filter	6
Battery Disposal	7
Guarantee	8

IMPORTANT

For any advice and to
order filters and
accessories
for your cleaner,
please telephone
the Electrolux helpline
on
08706 055055

www.electrolux.co.uk

IMPORTANT SAFEGUARDS

When using an electric appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not operate the vacuum cleaner or charger that has been damaged in any way. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service centre.
- To avoid excessive heat and damage to the unit or batteries, do not operate the vacuum cleaner while in the charging stand.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual.
- Use only the charger provided to recharge.
- Do not pull or carry the charger by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not unplug by pulling on cord. To unplug, grasp the charger, not the cord.
- Do not handle charger or vacuum cleaner with wet hands.
- **DO NOT MUTILATE OR INCINERATE BATTERIES AS THEY WILL EXPLODE AT HIGH TEMPERATURES.**
- Leaks from battery cells can occur under extreme usage or temperature conditions. If the liquid gets on the skin (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention. NOTE: The liquid is a 25-35% solution of potassium hydroxide.
- The terminal on the vacuum cleaner should be kept free and clean of objects. While there is no shock hazard from the terminal, a burn could occur if metal objects are inserted into the terminal area.
- This vacuum cleaner creates suction. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without a filter in place. When servicing the unit, never put fingers or other objects into the fan chamber in case the unit would accidentally be turned on.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Locate the wall bracket indoors in a cool, dry area not exposed to the weather to avoid electrical shock and/or cleaner damage.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

GENERAL INFORMATION


The cordless vacuum cleaner is the answer for quick, convenient, and easy cleanups. Grab the cleaner for little tasks rather than using a larger cleaner. Place the wall bracket in any area of easy access that allows versatile cleaning of kitchen crumbs, window sills, or steps. Always store the cleaner in the wall bracket to provide a ready charge.

**Charge for 14-16 hours before first use.
Batteries could lose charge in shipping.**

It is best to charge the batteries when temperatures are between 32°F (0°C) and 104°F (40°C). Other temperatures could damage batteries.

While charging, the charger may become warm to the touch. This is a normal condition and does not indicate a problem.

Important Battery Disposal Information Nickel-Cadmium Batteries

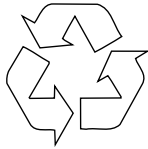

Your vacuum cleaner uses nickel-cadmium batteries in a removable pack. To protect our environment, properly dispose of the battery pack when the batteries no longer hold a charge. A municipal waste will not dispose of the battery pack.

Ni-Cd

NOTE: Remove the battery pack only when the batteries no longer hold a charge and you plan to dispose of them.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. If additional service is required, telephone the Electrolux helpline on:

08706 055055

Spares

New filters can be obtained from Authorised Electrolux dealers and electrical retailers. If difficulty is experienced in obtaining spares please call Electrolux Group on 08706 055055.



DO NOT OIL. The motor has lubrication and has a permanent seal.

Rating Plate


The model number is indicated on the rating plate which is located on the underside of the vacuum cleaner. For prompt and complete service, always refer to these numbers:

MODEL	TYPE	SERIAL NO.
VOLTS	WATTS	HERTZ
Electrolux Made in China		

Model and Type No. _____

Serial No. or Date Code _____

Identify Parts

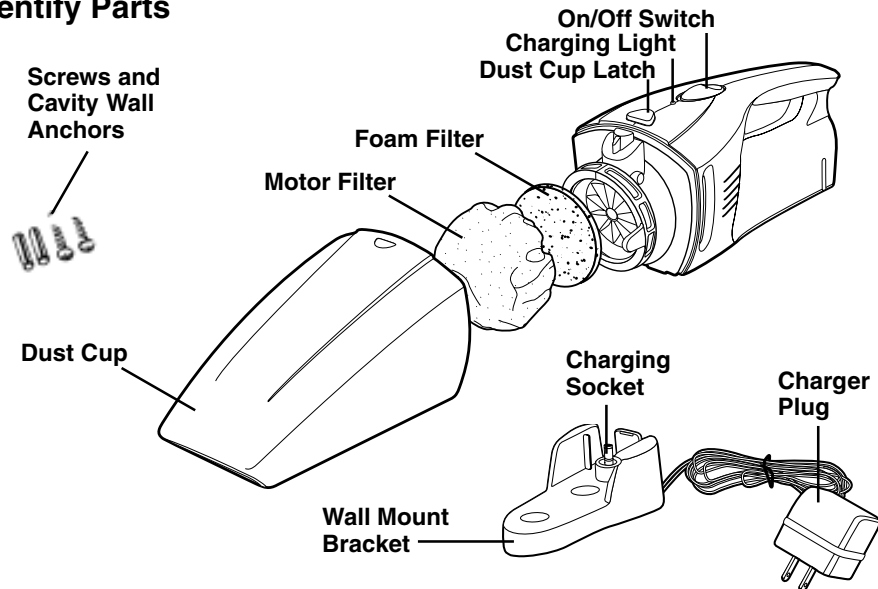

USING THE VACUUM CLEANER

1. To switch on, move the on/off switch forward towards the dust container.
2. To switch off, move the on/off switch backward towards the handle.


How to Wall Mount your Wall Bracket

CAUTION: Use only charger model AD-0514-BS1.

Your vacuum cleaner has a special bracket designed to hold the unit, so that it may recharge while mounted on the wall. **The wall bracket can be positioned whichever way is convenient for the location you have chosen.**


Mount on a wall where there are no dangerous objects hidden beneath the wall surface like electrical wires, pipes, etc.

1. Hold bracket against wall to mark location for screws.
2. Use a 1/4 inch drill for drilling holes for the plastic anchors.
3. Insert the anchors. Line up the bracket with the anchors.
4. Use a screwdriver to drive the screws into the anchors to secure the bracket.

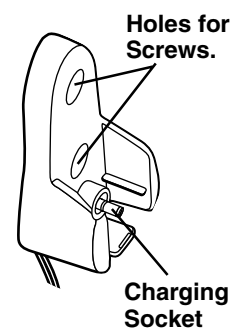

How to Mount your Vacuum Cleaner

5. Line the socket charger on the wall bracket up with the receptacle on the back of the cleaner. Push the cleaner against the wall bracket until you hear the charger socket click into place.
6. Plug the charger into an electrical outlet.
7. The charging light will come on, to indicate the vacuum cleaner is charging.

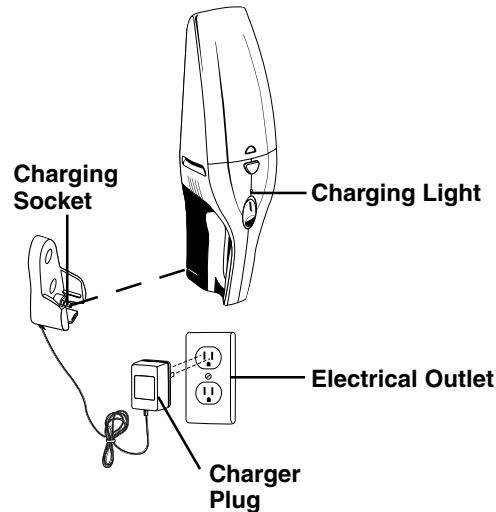

NOTE: Charge the cleaner for 14-16 hours before initial use. The batteries of a new cleaner are on a low charge.


Keeping your Vacuum Cleaner Ready for Use

Return your vacuum cleaner to the wall bracket after every use. Firmly position into the mounting bracket ensuring that the vacuum cleaner fits correctly into the charging socket. It will then be recharged and ready for operation at all times.

The charger plug can be left in the electrical outlet at all times, even when the unit is in use. It is impossible to overcharge the batteries. The charger plug will become warm, however, this is not a cause for concern.

HOW TO USE


1. Push the power switch forward to turn on.
2. Pull the power switch back to turn off.

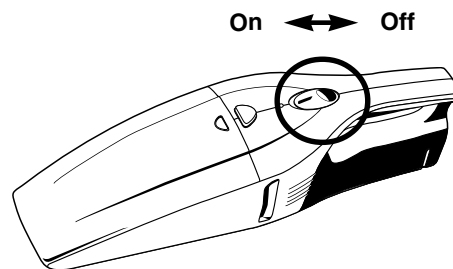


HOW TO MAINTAIN

The instructions given in this booklet serve as a guide to routine maintenance. Keep the cleaner operating at top efficiency. Empty the dust cup and clean the filter after each use.


Empty Dust Cup

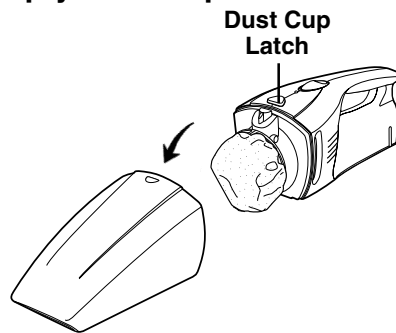

1. Push down on dust cup latch.
2. Pull dust cup from handle section.

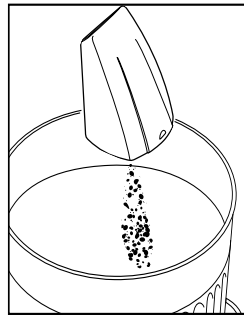

3. Shake contents into a waste container.

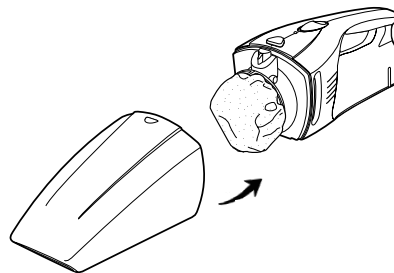


4. Press dust cup onto handle section until they snap together.

Clean Filters

Clean the filters after each cleaner use.

1. Open dust cup. (See above.)
2. Pull dust cup filter off handle section.
3. Pull motor filter out of filter grid.
4. Shake and brush the dust and dirt from filters.
5. If desired, rinse the filters by hand in warm water using a mild detergent.
6. Air dry thoroughly.
7. Replace filters and dust cup.

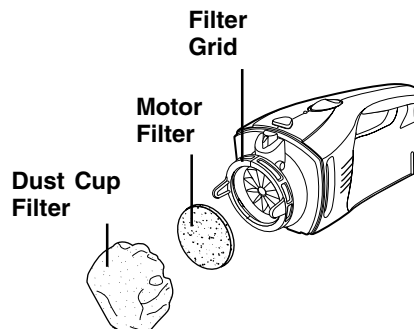

Remove Battery Pack for Disposal




For information 08706 055055.

Ni-Cd

NOTE: Remove the battery pack only when the batteries no longer hold a charge and you plan to dispose of them.

CAUTION: Do not short circuit or dispose of in fire. Dispose of properly.

A municipal waste will not dispose of the battery pack. Use a recycling center if one is convenient.

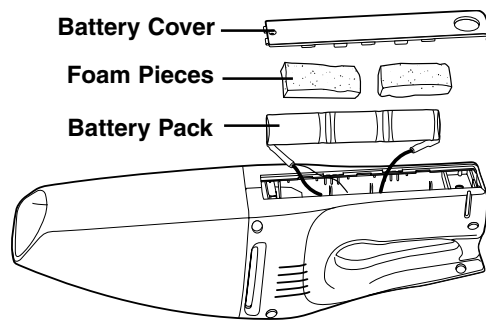

1. Lay cleaner down on its top.
2. Use a Phillips® screwdriver to remove the screw on battery cover, lift cover up and away from unit.
3. Remove the two foam pieces then remove battery pack and dispose of properly.
For more information call the Electrolux helpline on 08706 055 055.

Replacement Battery Pack unavailable.

GUARANTEE

This guarantee is in addition to your statutory and other legal rights.

This product is for household use only.

Electrolux products are carefully designed, manufactured, tested and inspected and, in consequence, we undertake to replace or repair any part found to be defective in materials or workmanship, within one year of delivery to the original purchaser, free of charge. You may be required to take the product to your nearest service provider if the product requires attention during the first year.

There are certain conditions which may invalidate this guarantee:

- a.** It is dependent upon the appliance being correctly installed and used in accordance with the Company's instructions under normal domestic conditions within the United Kingdom or the Republic of Ireland.
- b.** The guarantee may be invalidated by unauthorised repair or modification of the appliance.

Electrolux does not accept liability for all defects arising from neglect, misuse or accident. This guarantee excludes such normal wearing parts as cloths and brushes as the life of these depends upon the amount and nature of use.

For further assistance relating to your handheld vac contact Electrolux helpline on 08706 055 055. Proof of purchase may be required.

IMPORTANT:

For future reference we suggest you record the following details here, and keep the receipt with the handbook as proof of purchase.

Purchased from _____

Date purchased _____ Model no _____



101 Oakley Road, LUTON, BEDFORDSHIRE, LU4 9QQ

Features of the Electrolux vacuum cleaner and accessories supplied with it are protected in Great Britain and abroad by Patents or Registered Designs.

This appliance conforms with the requirements of the amended E.E.C. directive No. 89/336/EEC relating to electromagnetic compatibility (EMC) CE.

Electrolux, may introduce modifications to their product from time to time, and consequently the details given in this booklet are subject to alteration without notice.